



SAW-CUT AND SHAPE
UNITS AS NEEDED TO FIT

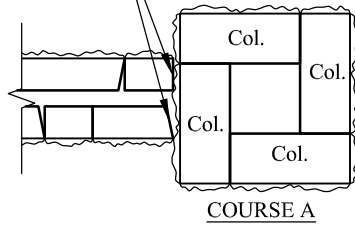


COURSE A



SHAPE UNIT USING
GRINDER OR SAW TO
ABUT ADJACENT UNITS.

UNIT-SHAPING DETAIL

SAW-CUT AND SHAPE
UNITS AS NEEDED TO FIT

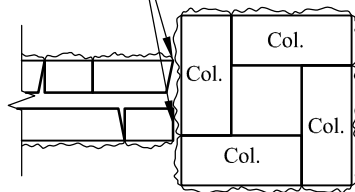

COURSE B

NOTES:

1. ALTERNATE COURSES A AND B UNTIL DESIRED COLUMN HEIGHT IS REACHED.
2. WALLS DO NOT TIE INTO COLUMN.
3. AFFIX ALL UNITS WITH CONSTRUCTION-GRADE ADHESIVE.



Anchor Wall Engineering, LLC
5959 Baker Road, Suite 390
Minnetonka, MN 55345

These graphic representations are intended for preliminary design purposes only and are not to be used for construction without the signature of a registered professional engineer.

© 2011 Anchor Wall Engineering, LLC
® and ™ Anchor Wall Systems, Inc.

Drawn By: AWE
Date: 2/7/2011
Scale: 1/2"=1'-0"

Drawing Title: Brisa™ Freestanding Wall System
Column at End of Wall

Project Information: Typical Details For
Freestanding Walls