


AB Metro Patio Wall Element - Benches

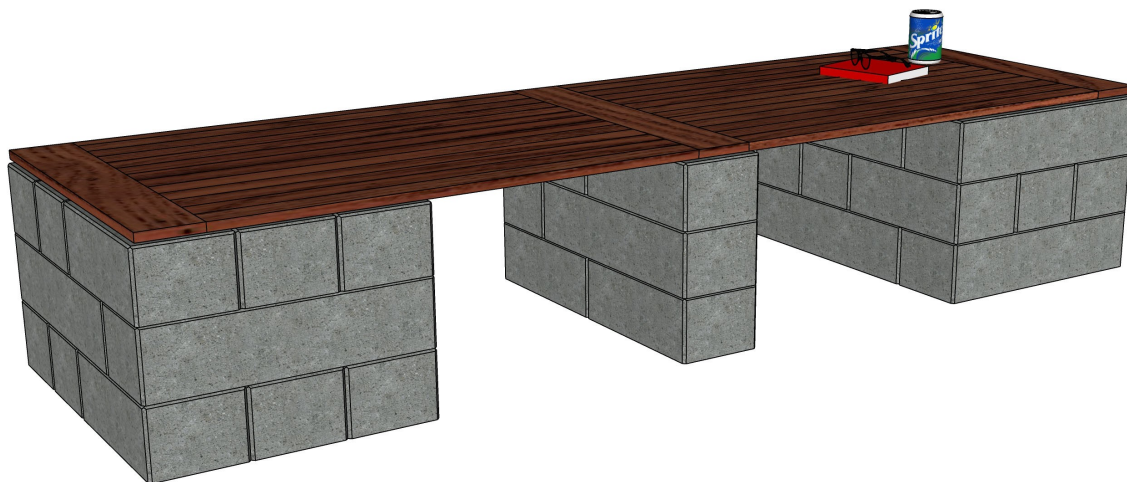


Finished size (approx.):

Height: 3 courses—18 in. (460 mm)

Depth—2 ft. (0.6 m)

Width—8 ft. 8 in. (2.7 m)

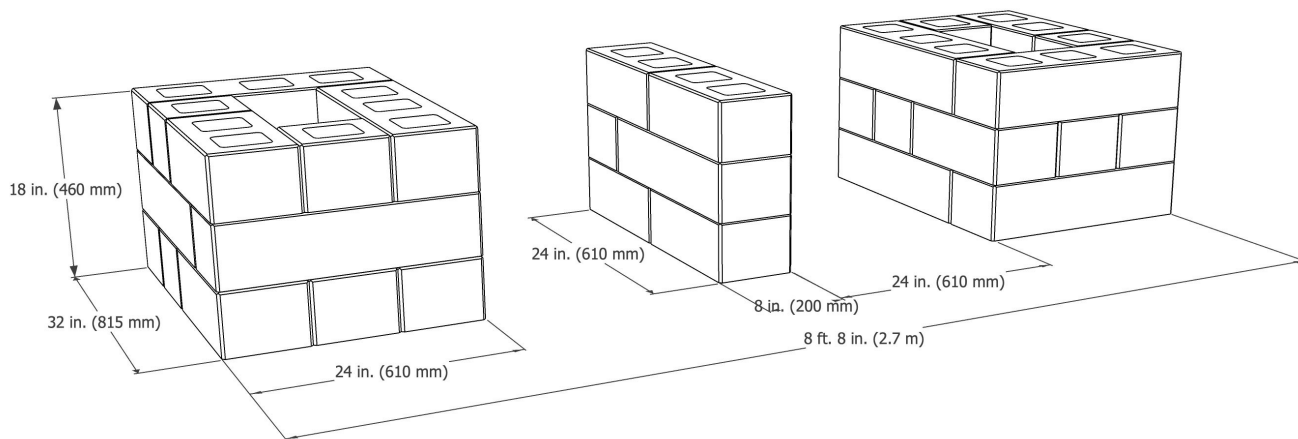

Bench	32x104
Materials Required	Quantities
AB Metro Patio Wall Sets:	15
Adhesive* (28 oz tube):	2
Sets per course:	5


Seating determined by designer.
 *Adhesive should cover 86 lin/ft.
 (26 lin/m) per tube



allanblock.com

Please visit allanblock.com for more information


Use the [AB Metro Reference Guide](#) for guidelines and limitations.

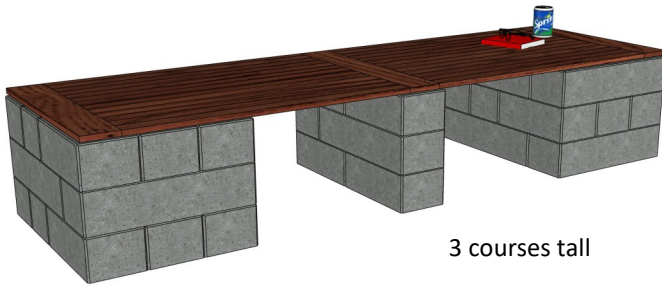

3 courses tall


Odd Course Patterns for 32x104

Start **Magic 1-2-3 Pattern** here to build back wall first.

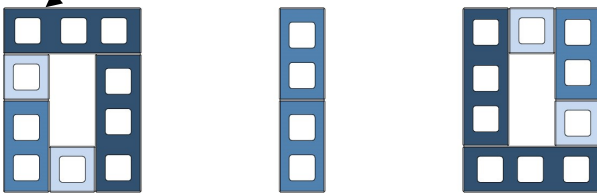

Even Course Pattern for 32x104


Place 1 core blocks center on 3 core to start the **Magic 1-2-3 Pattern**.

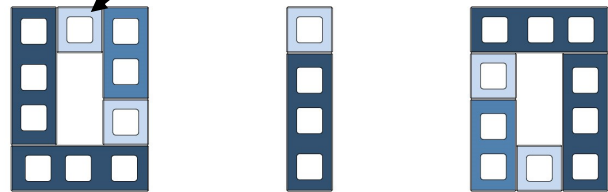



Notes:

- For proper base preparation, see the AB Metro Reference Guide—Building Basics—Step 2.
- For block installation and gluing requirements, see the AB Metro Reference Guide—Building Basics Step 3
- For use of **Magic 1-2-3 Pattern** and layout basics, see the AB Metro Reference Guide—Where to Start.
- Elements must be built 3 ft (1 m) from back of gravity retaining walls, see the AB Metro Reference Guide—Guidelines and Limitations.

Odd Course Pattern for 32x72

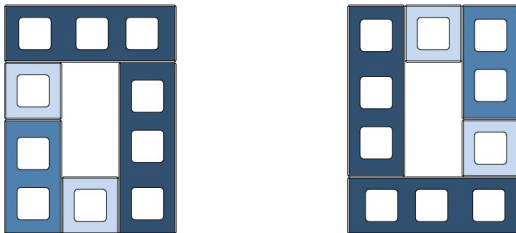

Even Course Pattern for 32x72

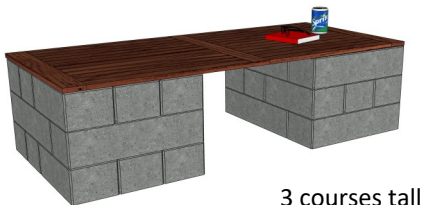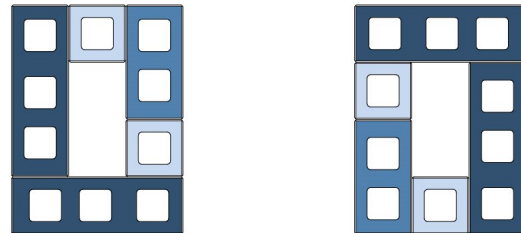


3 courses tall

Bench	32x72
Materials Required	Quantities
AB Metro Patio Wall Sets:	12
Adhesive *(28 oz tube):	2
Sets per course:	4



Use the [AB Metro Reference Guide](#) for guidelines and limitations.

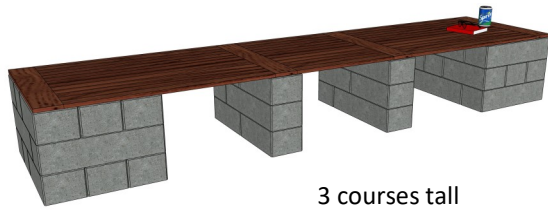


3 courses tall


Bench		32x136
Materials Required	Quantities	
AB Metro Patio Wall Sets:		15
Adhesive *(28 oz tube):		2
Sets per course:		5

Odd Course Patterns for 32x136

Start **Magic 1-2-3 Pattern** here to build back wall first.

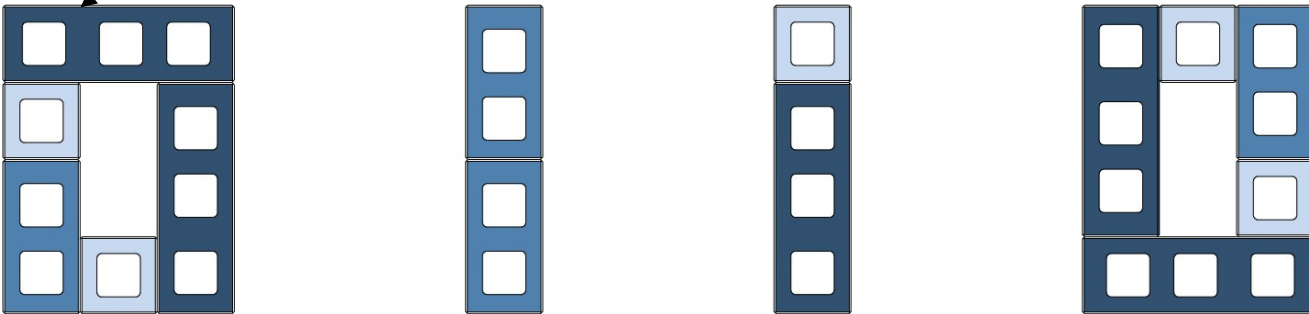

Even Course Pattern for 32x136

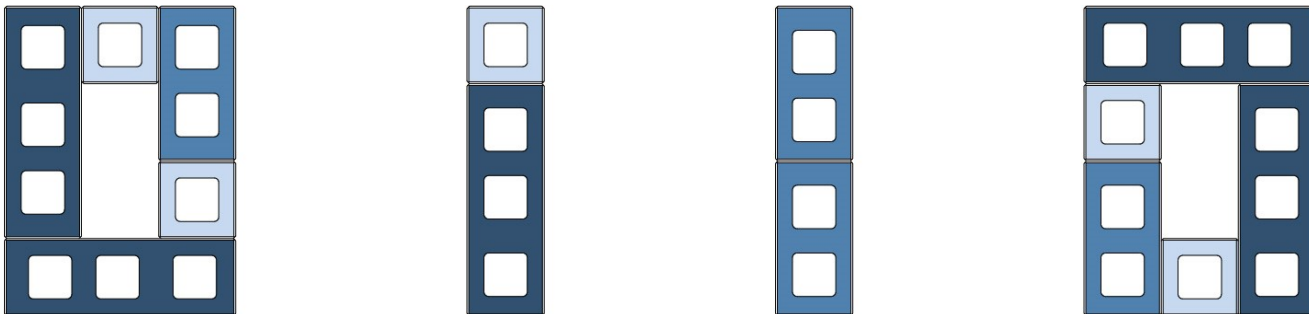

*Adhesive should cover 86 lin/ft. (26 lin/m) per tube per tube.